

*K-Wood*  
**KITCHENS INC.**

**K-Wood Kitchens** has over 30 years of combined industry experience in the manufacturing and design of custom kitchens, cabinetry, bathrooms and whole home renovations. Visit our state-of-the-art showroom today to start planning your dream project.

### **K-Wood Kitchens Showroom**

Weekdays 9 am to 6 pm | Saturdays 9 am to 5 pm  
36 Continental Place, Scarborough, ON, M1R 2T4  
(416) 332-0381



01



02



03



04



05

# R1

01 • 24-285  
\$8<sup>00</sup>

02 • 24-286  
\$10<sup>00</sup>

03 • 24-287  
\$12<sup>00</sup>

04 • 24-113  
\$10<sup>00</sup>

05 • 24-253  
\$13<sup>00</sup>



01



02



03



04



05



06



07



10



08



09



11

# R1

01 • 24-212  
\$14<sup>00</sup>

02 • 24-210  
\$20<sup>00</sup>

03 • 24-213  
\$12<sup>00</sup>

04 • 24-214  
\$12<sup>00</sup>

05 • 24-255  
\$12<sup>00</sup>

06 • 24-211  
\$14<sup>00</sup>


07 • 24-282  
\$8<sup>00</sup>

08 • 24-254  
\$23<sup>00</sup>

09 • 24-327  
\$5<sup>00</sup>

10 • 24-283  
\$10<sup>00</sup>

11 • 24-284  
\$12<sup>00</sup>



01



02



03



04



05



06



07



08



09



10

## R2

01 • 24-262  
\$14<sup>00</sup>

02 • 24-221  
\$20<sup>00</sup>

03 • 24-107  
\$12<sup>00</sup>

04 • 24-109  
\$12<sup>00</sup>

05 • 24-235  
\$19<sup>00</sup>

06 • 24-105  
\$7<sup>00</sup>

07 • 24-217  
\$16<sup>00</sup>

08 • 24-222  
\$24<sup>00</sup>

09 • 24-332  
\$5<sup>00</sup>

10 • 24-329  
\$5<sup>00</sup>

## R2

01 • 24-257  
\$12<sup>00</sup>

02 • 24-234  
\$17<sup>00</sup>

03 • 24-245  
\$24<sup>00</sup>

04 • Out of  
stock



01



02



03



04



### R3

01 • 24-370  
\$9<sup>00</sup>

02 • 24-383  
\$8<sup>00</sup>

03 • 24-371  
\$9<sup>00</sup>

04 • 24-377  
\$6<sup>00</sup>

05 • 24-148  
\$5<sup>00</sup>

06 • 24-372  
\$9<sup>00</sup>

07 • 24-369  
\$5<sup>00</sup>

08 • 24-381  
\$10<sup>00</sup>

09 • 24-380  
\$10<sup>00</sup>

10 • 24-378  
\$9<sup>00</sup>



### R3

01 • 24-384  
\$10<sup>00</sup>

02 • 24-399  
\$9<sup>00</sup>


03 • 24-126  
\$8<sup>00</sup>

04 • 24-398  
\$12<sup>00</sup>

05 • 24-400  
\$10<sup>00</sup>

06 • 24-379  
\$10<sup>00</sup>

07 • 24-149  
\$8<sup>50</sup>

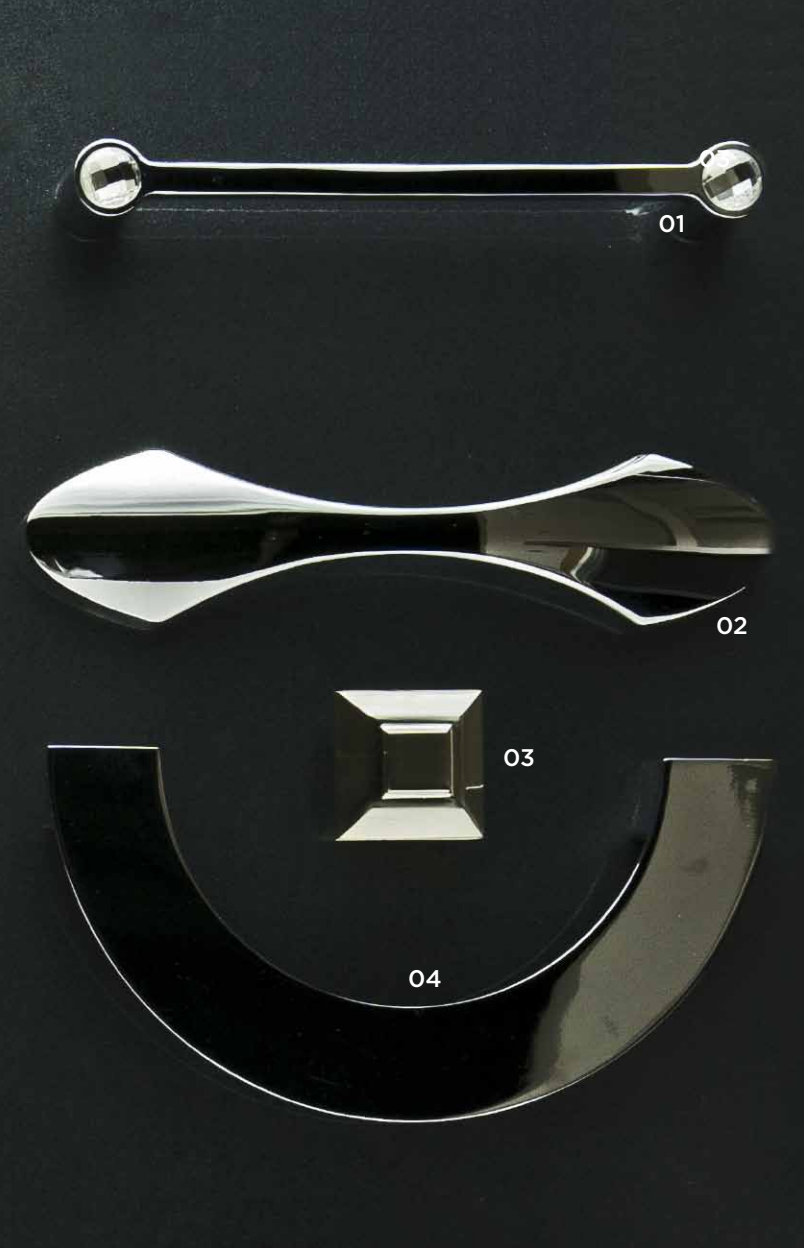


# R4

01 • 24-230  
\$20<sup>00</sup>

02 • 24-256  
\$8<sup>00</sup>

03 • 24-263  
\$7<sup>00</sup>

04 • 24-240  
\$22<sup>00</sup>

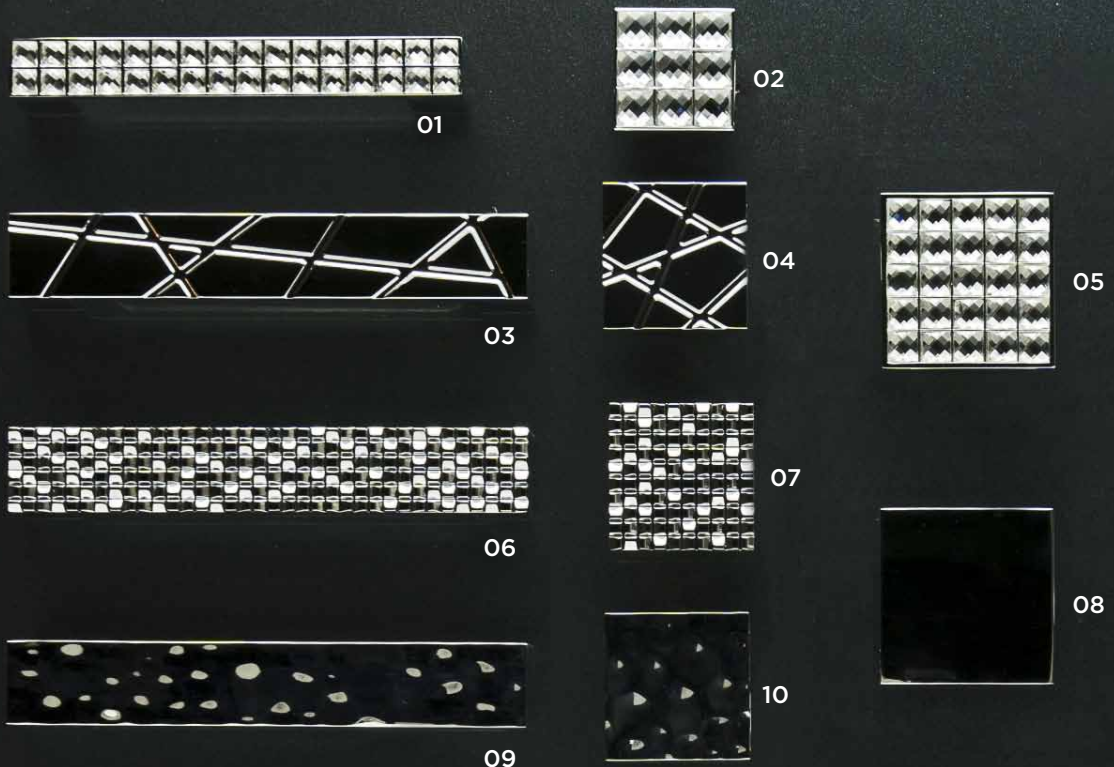

# R4

01 • 24-227  
\$40<sup>00</sup>

02 • 24-228  
\$30<sup>00</sup>

03 • 24-101  
\$20<sup>00</sup>

04 • 24-102  
\$12<sup>00</sup>

05 • 24-229  
\$36<sup>00</sup>

06 • 24-103  
\$20<sup>00</sup>

07 • 24-104  
\$12<sup>00</sup>

08 • 24-226  
\$8<sup>00</sup>

09 • 24-233  
\$20<sup>00</sup>

10 • 24-232  
\$12<sup>00</sup>



01



02



03



04



05



06



07



08



09



10



11



12



01



02



03



04



05



06



07



08



09



10



11



12



13



14

## S1-A

01 • L914-128HC  
\$6<sup>00</sup>

02 • D564-32HC  
\$5<sup>50</sup>

03 • D564-32GREB  
\$5<sup>50</sup>

04 • D564-32ARN  
\$5<sup>50</sup>

05 • L914-128ARN  
\$6<sup>00</sup>

06 • L1284ARN(L99)  
\$5<sup>00</sup>

07 • D2157ARN  
\$5<sup>00</sup>

08 • L914-128GREB  
\$6<sup>00</sup>

09 • L1284ARB(L98)  
\$5<sup>00</sup>

10 • D5056AC(K45)  
\$5<sup>00</sup>

11 • L914-128REB  
\$6<sup>00</sup>

12 • L1284ASR(L100)  
\$5<sup>00</sup>

## S1-B

01 • D2157ASR  
\$5<sup>00</sup>

02 • D2157ARB  
\$5<sup>00</sup>

03 • L636ASR(L90)  
\$5<sup>00</sup>

04 • D2514ARN  
\$5<sup>00</sup>

05 • D2514ASR  
\$5<sup>00</sup>

06 • D2514ARB  
\$5<sup>00</sup>

07 • L636ARB(L92)  
\$5<sup>00</sup>

08 • D5056ARN(K49)  
\$5<sup>00</sup>

09 • L636ARN(L91)  
\$5<sup>00</sup>

10 • D5056RBC(K40)  
\$5<sup>00</sup>

11 • D5056ARB(K47)  
\$5<sup>00</sup>

12 • L600-128REB  
\$7<sup>00</sup>

13 • D5056REB(K61)  
\$5<sup>00</sup>


14 • L600-128BN  
\$7<sup>00</sup>



01



02



03



01



02



03




04



04



05



06



05



06



07



08



07



08



09



09



10



11



12



10



11



12



13



14



15



16

## S2-A

- |  |  |  |  |
|--|--|--|--|
| 01 • D1293ASR(K-52)<br>\$6 <sup>00</sup> | 02 • L1294ASR(L-97)<br>\$6 <sup>50</sup> | 03 • L2146ASR<br>\$6 <sup>00</sup>       | 04 • D1293ARB(K-50)<br>\$6 <sup>00</sup> |
| 05 • L1294ARB(L-95)<br>\$6 <sup>50</sup> | 06 • L2146ARB<br>\$6 <sup>00</sup>       | 07 • D1293REB<br>\$6 <sup>00</sup>       | 08 • L129REB<br>\$6 <sup>50</sup>        |
| 09 • L2146REB<br>\$6 <sup>00</sup>       | 10 • D1293ARN(K-51)<br>\$6 <sup>00</sup> | 11 • L1294ARN(L-96)<br>\$6 <sup>50</sup> | 12 • L2146ARN<br>\$6 <sup>00</sup>       |

## S2-B

- |  |  |  |                                       |
|--|--|--|---------------------------------------|
| 01 • D812ASR<br>\$5 <sup>00</sup>      | 02 • D725ASR(K28)<br>\$5 <sup>00</sup> | 03 • D896ASR<br>\$5 <sup>00</sup>      | 04 • D289-34ARN<br>\$6 <sup>50</sup>  |
| 05 • D812ARB<br>\$8 <sup>00</sup>      | 06 • D725ARB(K26)<br>\$5 <sup>00</sup> | 07 • D725RBC<br>\$5 <sup>00</sup>      | 08 • D289-43BN<br>\$5 <sup>00</sup>   |
| 09 • D812REB<br>\$8 <sup>00</sup>      | 10 • D725REB(K53)<br>\$5 <sup>00</sup> | 11 • D825ASR<br>\$5 <sup>50</sup>      | 12 • D289-43REB<br>\$6 <sup>50</sup>  |
| 13 • D812ARN(K29)<br>\$8 <sup>00</sup> | 14 • D725ARN(K27)<br>\$5 <sup>00</sup> | 15 • D825ARN(K30)<br>\$5 <sup>50</sup> | 16 • D289-43GREB<br>\$6 <sup>50</sup> |





01



02



03



04

## S3-A

01 • L482BN  
\$5<sup>00</sup>

02 • L482-160BN  
\$5<sup>50</sup>

03 • L482-224BN  
\$7<sup>50</sup>

04 • L482-320BN  
\$9<sup>00</sup>

## S3-B

01 • L8020BN  
\$8<sup>00</sup>

02 • L2025HC(L44)  
\$5<sup>00</sup>

03 • L2063HC  
\$5<sup>00</sup>

04 • L325-128HC  
\$5<sup>50</sup>

05 • L1104-128HC  
\$7<sup>50</sup>

06 • L1104-160HC  
\$9<sup>50</sup>

07 • L181BN(L93)  
\$6<sup>00</sup>

08 • L2063BN(L46)  
\$5<sup>00</sup>



01



04



05



06



02



03



07



08

# S4-A



01 • D5056HC(K16)  
\$5<sup>00</sup>

03 • D5082HC(K7)  
\$5<sup>00</sup>

05 • D5012HC(K32)  
\$5<sup>00</sup>

07 • D5018RG(K42)  
\$5<sup>00</sup>

09 • D5043RG  
\$5<sup>00</sup>

11 • D5056BL(K39)  
\$5<sup>00</sup>

13 • D5014HC/RG(K5)  
\$5<sup>00</sup>

15 • D5012BN(K43)  
\$5<sup>00</sup>

17 • D5018RBC(K54)  
\$5<sup>00</sup>

19 • D5028NP/RG(K19)  
\$5<sup>00</sup>

02 • D5018HC(K41)  
\$5<sup>00</sup>

04 • D5043HC(K24)  
\$5<sup>00</sup>

06 • D5056RG(K17)  
\$5<sup>00</sup>

08 • D5032HC/RG(K35)  
\$5<sup>00</sup>

10 • D5012RG(K32)  
\$5<sup>00</sup>


12 • D5018BN(K22)  
\$5<sup>00</sup>

14 • D5043BN(K15)  
\$5<sup>00</sup>

16 • D5056BK(K48)  
\$5<sup>00</sup>

18 • D5014RG/BL(K4)  
\$5<sup>00</sup>

20 • D5028HC  
\$5<sup>00</sup>

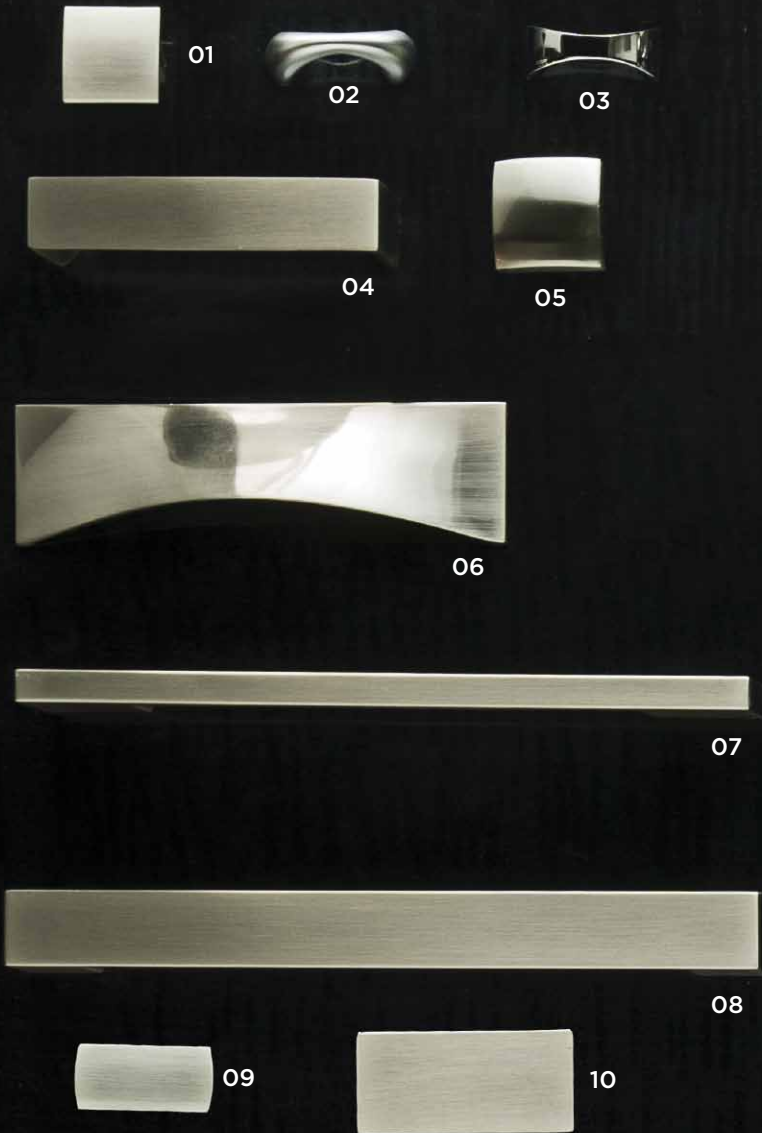

## S4-B

01 • D4031BN(K13)  
\$5<sup>00</sup>

02 • L0030SC(L2)  
\$6<sup>00</sup>

03 • L376HC  
\$5<sup>00</sup>

04 • L458BN  
\$5<sup>50</sup>

05 • D2504BN  
\$5<sup>00</sup>

06 • L591BN  
\$5<sup>00</sup>

07 • L980-190BN  
\$12<sup>00</sup>

08 • L979-192BN  
\$10<sup>00</sup>

09 • L756BN  
\$5<sup>00</sup>

10 • D716BN  
\$9<sup>00</sup>

## S5-A

01 • L212-160HC/SP  
\$12<sup>00</sup>

02 • L212HC/SPC(L86)  
\$6<sup>50</sup>


03 • D554HC/SP  
\$5<sup>00</sup>


04 • L617-096BN  
\$6<sup>00</sup>

05 • L617-320BN  
\$12<sup>00</sup>


06 • L617-160BN  
\$8<sup>00</sup>

07 • L617-224BN  
\$10<sup>00</sup>

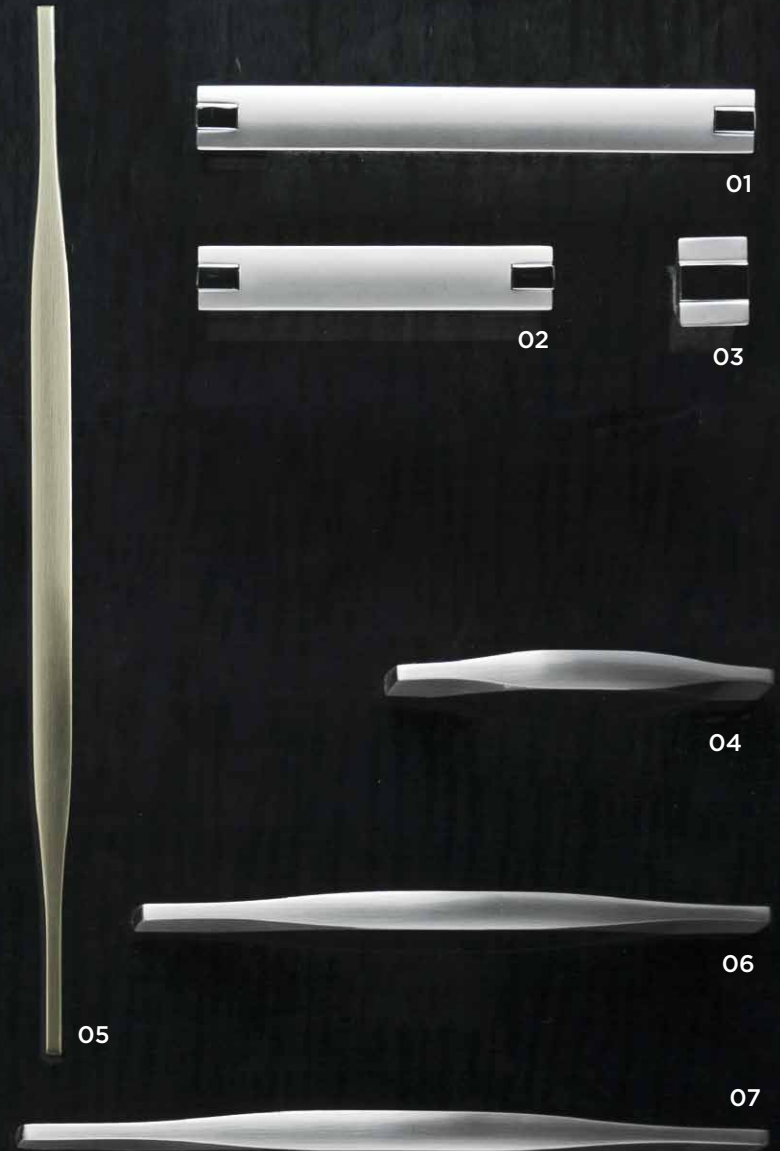




01



02



03



04



05



06

## S5-B

01 • L390HC  
\$9<sup>00</sup>

02 • L389HC  
\$7<sup>00</sup>

03 • L388HC  
\$5<sup>00</sup>

04 • L390BN  
\$9<sup>00</sup>

05 • L389BN  
\$7<sup>00</sup>

06 • L388BN  
\$5<sup>00</sup>

## S6-A

01 • L8021-160BN  
7 inch \$10<sup>00</sup>

L765BN  
4 inch \$8<sup>00</sup>

02 • L8021-160HC  
7 inch \$10<sup>00</sup>

L765HC  
4 inch \$8<sup>00</sup>

03 • L192-192BN  
7 inch \$8<sup>00</sup>

L192BN  
4 inch \$5<sup>00</sup>

04 • L192-192HC  
7 inch \$8<sup>00</sup>

L192HC  
4 inch \$5<sup>00</sup>



01




02



03



04

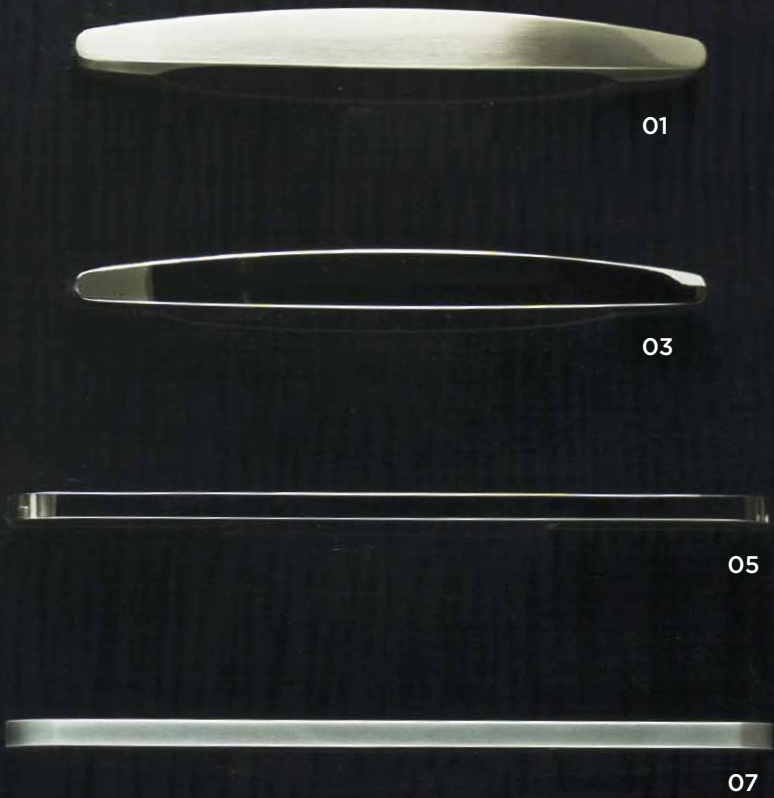


## S6-B

- |   |  |   |   |
|---|--|---|---|
| 01 • L1062-160BN<br>8" \$6 <sup>00</sup>                          | 02 • D477-42BN<br>1 <sup>3</sup> / <sub>4</sub> " \$8 <sup>50</sup>  | 03 • L1062-160HC<br>8" \$6 <sup>00</sup>                          | 04 • D477-42HC<br>1 <sup>3</sup> / <sub>4</sub> " \$8 <sup>50</sup> |
| 05 • L230HC<br>9 <sup>1</sup> / <sub>2</sub> " \$12 <sup>00</sup> | 06 • D477-42REB<br>1 <sup>3</sup> / <sub>4</sub> " \$8 <sup>50</sup> | 07 • L230SC<br>9 <sup>1</sup> / <sub>2</sub> " \$12 <sup>00</sup> |   |

## S7-A

- 01 • L676-128BN  
6" \$6<sup>00</sup>
- 02 • L676-128ORB  
6" \$6<sup>00</sup>
- 03 • L2025-192SS  
8<sup>1</sup>/<sub>2</sub>" \$8<sup>00</sup>
- 04 • L2025-256SS  
11<sup>1</sup>/<sub>2</sub>" \$9<sup>00</sup>
- 05 • L4017-192BN  
9" \$8<sup>00</sup>
- 06 • L209BN  
4<sup>3</sup>/<sub>4</sub>" \$5<sup>00</sup>
- 07 • L210BN  
6<sup>1</sup>/<sub>4</sub>" \$6<sup>00</sup>
- 08 • L1064-128BN  
7<sup>1</sup>/<sub>4</sub>" \$8<sup>00</sup>
- 09 • L4017-128BN  
6<sup>1</sup>/<sub>2</sub>" \$6<sup>00</sup>

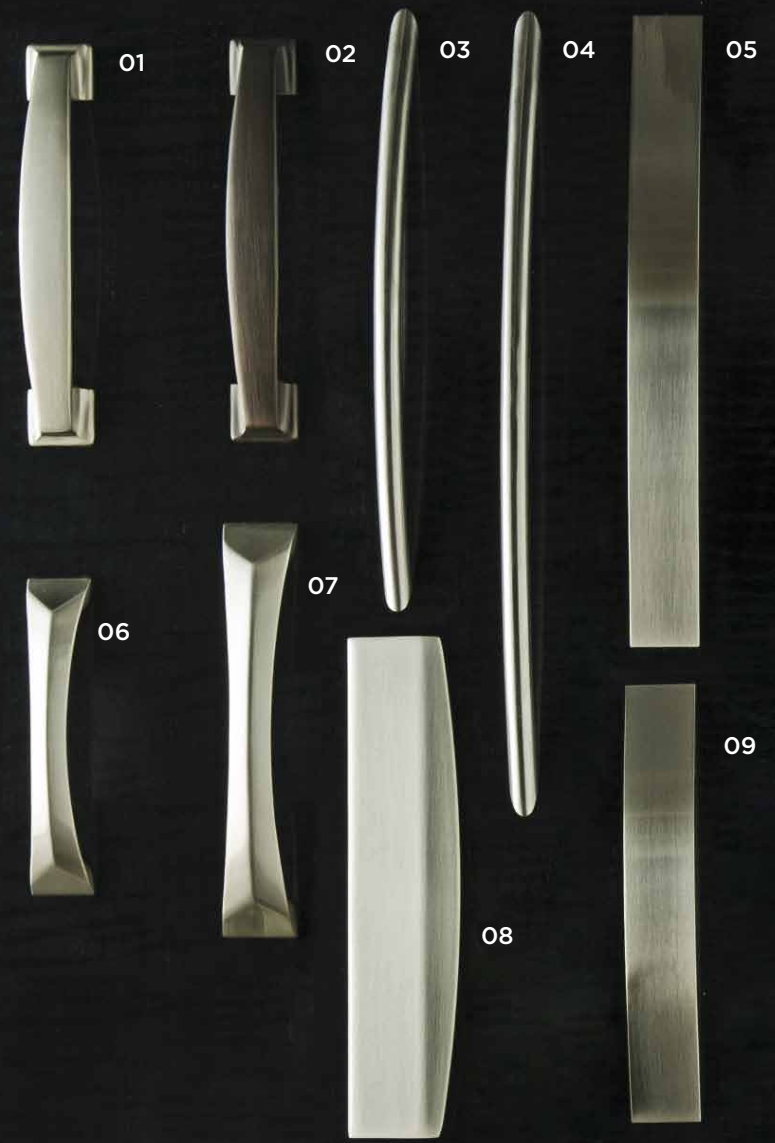



01



02



03



04



05

## W2-A

01 • 518-028BSN  
\$5<sup>00</sup>

02 • 121-096BN  
\$5<sup>00</sup>

03 • 121-128BN  
\$6<sup>50</sup>

04 • 151-320BN  
\$19<sup>00</sup>

05 • 151-000BN  
\$5<sup>00</sup>

06 • 398-096  
\$5<sup>00</sup>

07 • 151-192BN  
\$10<sup>00</sup>

08 • 151-128BN  
\$5<sup>00</sup>



01



02



03



04



05



06



07



08

## S7-B


01 • L130-128BN  
\$5<sup>00</sup>

02 • L130-160BN  
\$7<sup>00</sup>

03 • L130-192BN  
\$9<sup>00</sup>

04 • L161-50SS  
\$5<sup>00</sup>

05 • L161-096SS  
\$6<sup>50</sup>

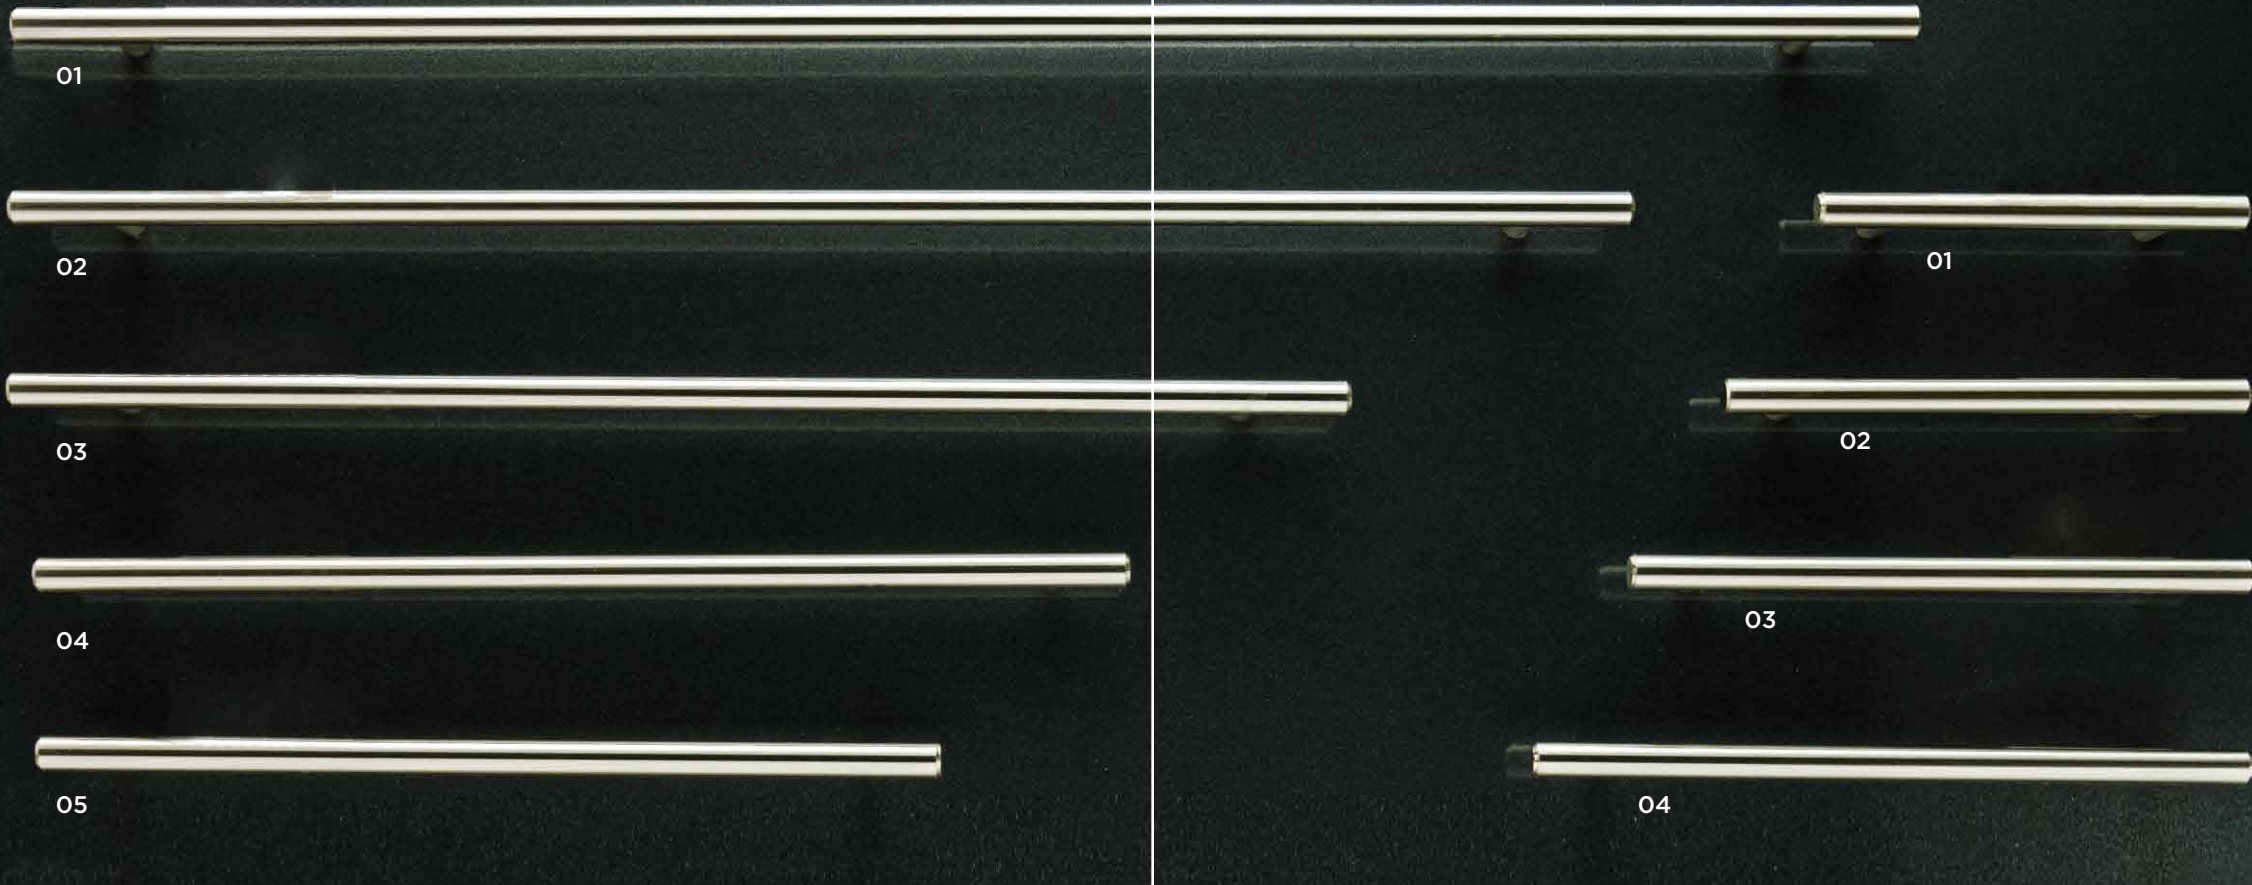

## W1-A

01 • 348-576BN  
\$15<sup>00</sup>

02 • 348-480BN  
21.5" \$12<sup>00</sup>

03 • 348-384BN  
18" \$11<sup>00</sup>

04 • 348-320BN  
14.5" \$10<sup>00</sup>

05 • 348-256BN  
12" \$9<sup>00</sup>

## W1-B

01 • 348-096BN  
5.5" \$5<sup>00</sup>

02 • 348-128BN  
7" \$5<sup>00</sup>

03 • 348-160BN  
8.25" \$7<sup>00</sup>

04 • 348-192BN  
9.5" \$8<sup>00</sup>



01




02



03



04



05



06



07



08



09



10



11

## W3-A

01 • (K)HK36ORB  
\$6<sup>00</sup>

02 • (K)HK36WS  
\$6<sup>00</sup>


03 • 322-096AI  
\$6<sup>00</sup>

04 • 322-096AT  
\$6<sup>00</sup>

05 • 322-096EC  
\$6<sup>00</sup>



01



02



03



04



05

## W2-B

01 • 159-320BN  
\$19<sup>00</sup>

02 • 159-160BN  
\$7<sup>50</sup>

03 • 159-000BN  
\$5<sup>00</sup>

04 • 159-128BN  
\$5<sup>00</sup>

05 • 518-028BNB  
\$5<sup>00</sup>

06 • 125-000BN  
\$5<sup>00</sup>

07 • 518-028BSN  
\$5<sup>00</sup>

08 • 238-096  
\$5<sup>00</sup>

09 • 125-128BN  
\$6<sup>50</sup>

10 • 338-096  
\$5<sup>00</sup>

11 • 125-096BN  
\$5<sup>00</sup>





01



02



03



04



05



06



07



08

## W3-B

01 • (K)HK35BLACK  
\$6<sup>00</sup>

02 • (K)HK35BN  
\$6<sup>00</sup>

03 • 518-124BN  
\$5<sup>00</sup>


04 • 322-00AI  
\$5<sup>00</sup>

05 • 518-930BSN  
\$5<sup>00</sup>

06 • 322-00AT  
\$5<sup>00</sup>

07 • 518-930BNB  
\$5<sup>00</sup>

08 • 322-000EC  
\$5<sup>00</sup>



01



03



02



04




05



06



07

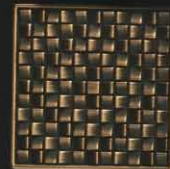

08



09



10

## W3-C

01 • 218-128  
\$6<sup>00</sup>

02 • (K)HK9BN  
\$5<sup>00</sup>

03 • 228-128  
\$6<sup>00</sup>

04 • 208-128  
\$6<sup>00</sup>

05 • 530-002AT  
\$8<sup>50</sup>


06 • 530-001AT  
\$6<sup>50</sup>

07 • 530-192AT  
\$20<sup>00</sup>

08 • 530-002EC  
\$9<sup>50</sup>

09 • 530-001EC  
\$8<sup>00</sup>

10 • 530-192EC  
\$25<sup>00</sup>

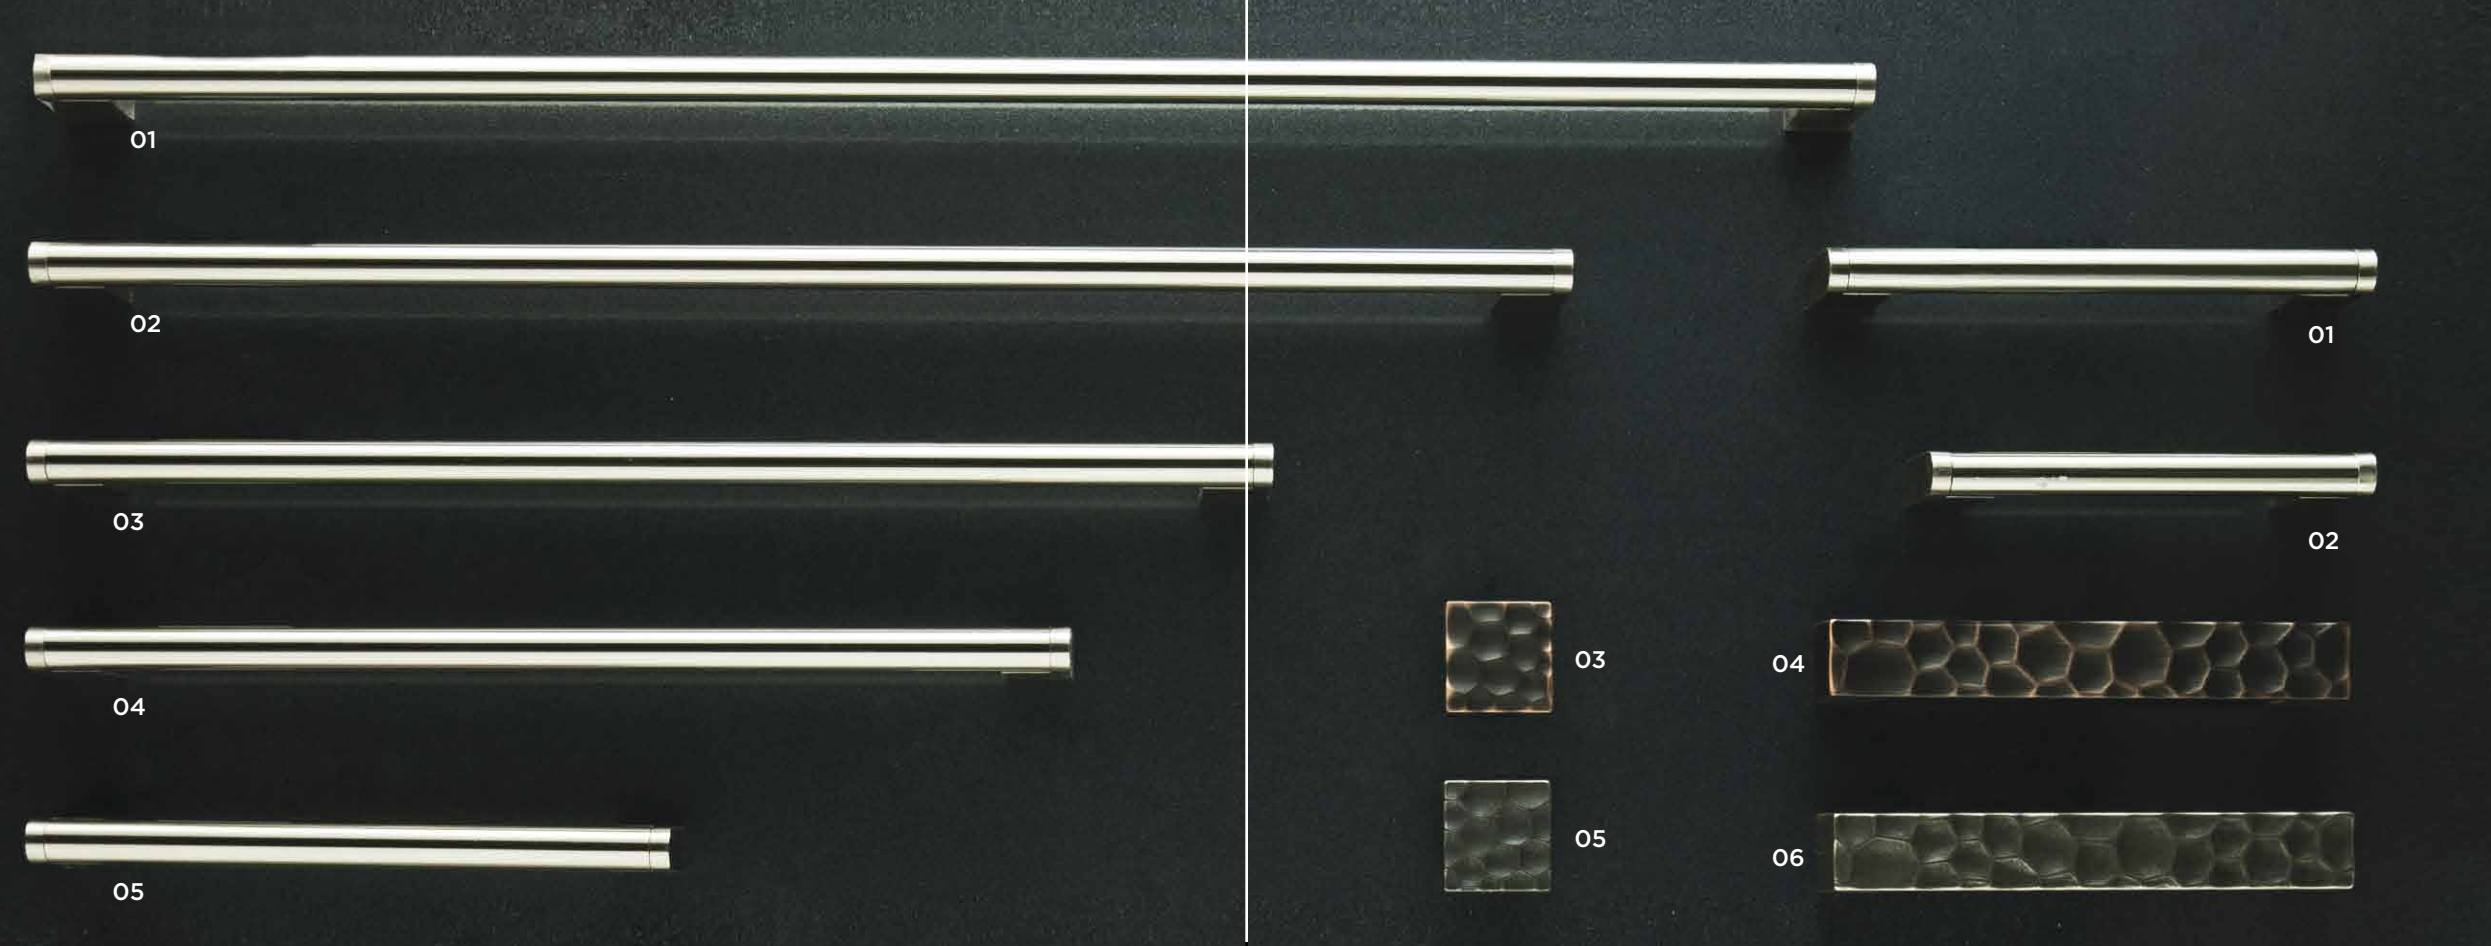

## W4-A

01 • 368-576BN  
\$18<sup>50</sup>

02 • 368-480BN  
\$17<sup>00</sup>

03 • 368-384BN  
\$16<sup>00</sup>

04 • 368-320BN  
\$10<sup>50</sup>

05 • 368-192BN  
\$8<sup>00</sup>

## W4-B

01 • 368-160BN  
\$7<sup>00</sup>

02 • 368-128BN  
\$5<sup>00</sup>

03 • 534-000EC  
\$5<sup>50</sup>

04 • 534-160EC  
\$13<sup>00</sup>

05 • 534-000AT  
\$5<sup>00</sup>

06 • 534-160AT  
\$12<sup>50</sup>



01



02



03



04



05



06



07



01



02



03



04



05

## W5-A

01 • 157-320BN  
\$20<sup>00</sup>

02 • 157-192BN  
\$9<sup>00</sup>

03 • 157-128BN  
\$5<sup>00</sup>

04 • 157-000BN  
\$5<sup>00</sup>

05 • 129-096BN  
\$5<sup>00</sup>

06 • 129-000BN  
\$5<sup>00</sup>

07 • 129-128BN  
\$6<sup>50</sup>

## W5-B

01 • 182-128BN  
\$5<sup>50</sup>

02 • 182-160BN  
\$6<sup>00</sup>

03 • 182-256BN  
\$8<sup>00</sup>

04 • 182-320BN  
\$10<sup>50</sup>

05 • 182-384BN  
\$12<sup>50</sup>

\*\* This page also  
available in PC colour



## W6-A

01 • 185-384BN  
\$12<sup>00</sup>

02 • 185-320BN  
\$10<sup>00</sup>

03 • 185-384PC  
\$12<sup>00</sup>

04 • 185-320PC  
\$10<sup>00</sup>

05 • 189-256PC  
\$12<sup>00</sup>

06 • 189-192PC  
\$10<sup>00</sup>

07 • 189-128PC  
\$7<sup>00</sup>



## W6-B

02 • 185-192BN  
\$7<sup>00</sup>

03 • 185-128BN  
\$6<sup>00</sup>

04 • 185-256PC  
\$9<sup>00</sup>

01 • 185-256BN  
\$9<sup>00</sup>

05 • 189-192PC  
\$7<sup>00</sup>

06 • 185-128PC  
\$6<sup>00</sup>

07 • 189-256BN  
\$12<sup>00</sup>

08 • 189-128BN  
\$7<sup>00</sup>

09 • 189-192BN  
\$10<sup>00</sup>




**W7  
-A**

01 • 219-003AN \$6 <sup>00</sup>	02 • 219-001AN \$5 <sup>00</sup>	03 • 219-001BN \$5 <sup>00</sup>	04 • 219-003BN \$6 <sup>00</sup>
05 • 219-096AN \$6 <sup>00</sup>	06 • 219-000AN \$5 <sup>00</sup>	07 • 219-000BN \$5 <sup>00</sup>	08 • 219-096BN \$6 <sup>00</sup>
09 • 219-160AN \$8 <sup>00</sup>	10 • 219-160BN \$8 <sup>00</sup>	11 • 219-003EC \$6 <sup>00</sup>	12 • 219-001EC \$5 <sup>00</sup>
13 • 219-001PC \$5 <sup>00</sup>	14 • 219-003PC \$6 <sup>00</sup>	15 • 219-096EC \$6 <sup>00</sup>	16 • 219-000EC \$5 <sup>00</sup>
17 • 219-000PC \$5 <sup>00</sup>	18 • 219-096PC \$6 <sup>00</sup>	19 • 219-160EC \$8 <sup>00</sup>	20 • 219-160PC \$8 <sup>00</sup>



**W7-B**

01 • 159-128PN \$5 <sup>50</sup>	02 • 159-160PN \$8 <sup>00</sup>	03 • 159-320PN \$19 <sup>50</sup>	04 • 159-000PN \$5 <sup>00</sup>
05 • 159-000PC \$5 <sup>00</sup>	06 • 159-128PC \$5 <sup>00</sup>	07 • 159-160PC \$7 <sup>00</sup>	08 • 159-320PC \$18 <sup>50</sup>

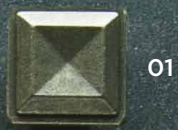

01



02



03



04



05



06

## W8-A

01 • 340-000AI  
\$5<sup>00</sup>

02 • 340-128AI  
\$7<sup>00</sup>

03 • 340-000EC  
\$5<sup>00</sup>

04 • 340-128EC  
\$7<sup>00</sup>

05 • 340-000AT  
\$5<sup>00</sup>

06 • 340-128AT  
\$7<sup>00</sup>



01



02



03



04



05



06



07



08



09



10



11



12



13



14



15



16



17



18

## W8-B

01 • 212-160BT  
\$9<sup>50</sup>

02 • 212-128EC  
\$6<sup>00</sup>

03 • 216-000BN  
\$5<sup>00</sup>

04 • 216-128BN  
\$6<sup>00</sup>

05 • 212-160BN  
\$8<sup>00</sup>

06 • 216-196BN  
\$8<sup>00</sup>

07 • 212-096EC  
\$5<sup>50</sup>

08 • 212-000EC  
\$5<sup>50</sup>

09 • 216-000EC  
\$5<sup>50</sup>

10 • 216-128EC  
\$6<sup>00</sup>

11 • 212-160EC  
\$8<sup>00</sup>

12 • 216-192EC  
\$9<sup>00</sup>

13 • 212-096BT  
\$6<sup>00</sup>

14 • 212-000BT  
\$5<sup>00</sup>

15 • 216-000BT  
\$5<sup>00</sup>

16 • 216-128BT  
\$7<sup>00</sup>

17 • 212-160BT  
\$9<sup>50</sup>

18 • 216-192BT  
\$9<sup>50</sup>



01




02



03



04

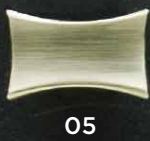

05



06



07



08



09

## W9-A

01 • 133-160BN  
\$8<sup>00</sup>

02 • 133-128BN  
\$7<sup>00</sup>

03 • 133-00BN  
\$5<sup>00</sup>

04 • 255-128BN  
\$6<sup>50</sup>

05 • 225-000BN  
\$5<sup>00</sup>

06 • 255-128EC  
\$7<sup>50</sup>

07 • 255-000EC  
\$5<sup>50</sup>

08 • 255-128BT  
\$8<sup>00</sup>

09 • 255-000BT  
\$5<sup>00</sup>

## W9-B

01 • 152-000BN  
\$5<sup>00</sup>

02 • 152-128BN  
\$7<sup>00</sup>

03 • 225-192BN  
\$8<sup>50</sup>

04 • 225-192EC  
\$8<sup>50</sup>

05 • 225-192BT  
\$10<sup>00</sup>



01



02



03



04



05

## W9-C



01



02



03



04



05



06



07



08

01 • 152-256BN  
\$13<sup>00</sup>

02 • 152-192BN  
\$10<sup>00</sup>

03 • 336-128AI  
\$6<sup>50</sup>

04 • 336-000AI  
\$5<sup>00</sup>


05 • 336-128EC  
\$6<sup>50</sup>

06 • 336-000EC  
\$5<sup>00</sup>

07 • 336-128AT  
\$6<sup>50</sup>

08 • 336-000AT  
\$5<sup>00</sup>



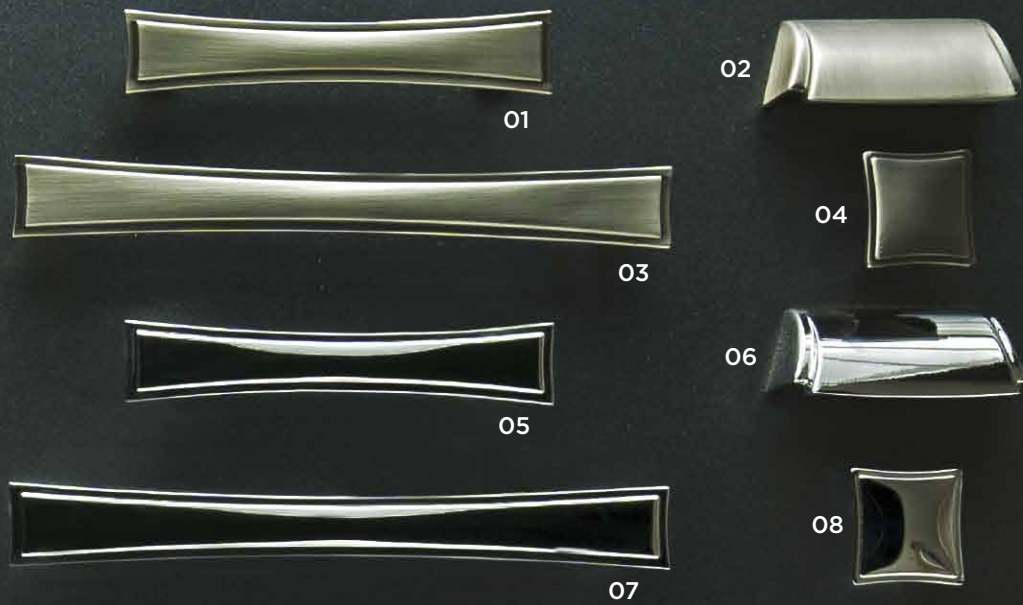

## W10-A

01 • 232-096BN \$6 <sup>00</sup>	02 • 232-001BN \$8 <sup>00</sup>	03 • 232-160BN \$8 <sup>00</sup>	04 • 232-000BN \$5 <sup>00</sup>
05 • 232-096EC \$6 <sup>00</sup>	06 • 232-001EC \$8 <sup>00</sup>	07 • 232-160EC \$8 <sup>50</sup>	08 • 232-000EC \$5 <sup>00</sup>

## W10-B

01 • 232-096AN \$6 <sup>00</sup>	02 • 232-001AN \$8 <sup>00</sup>	03 • 232-160AN \$8 <sup>00</sup>	04 • 232-000AN \$5 <sup>00</sup>
05 • 232-096PC \$6 <sup>00</sup>	06 • 232-001PC \$8 <sup>00</sup>	07 • 232-160PC \$8 <sup>00</sup>	08 • 232-000PC \$5 <sup>00</sup>

## W11



01 • 629-320PC  
\$15<sup>50</sup>

02 • 629-256PC  
\$11<sup>00</sup>

03 • 629-000PC  
\$5<sup>00</sup>

04 • 629-160PC  
\$7<sup>00</sup>

05 • 629-096PC  
\$6<sup>00</sup>


06 • 629-320BN  
\$15<sup>50</sup>

07 • 629-256BN  
\$11<sup>00</sup>

08 • 629-000BN  
\$5<sup>00</sup>


09 • 629-160BN  
\$7<sup>00</sup>

10 • 629-096BN  
\$6<sup>00</sup>

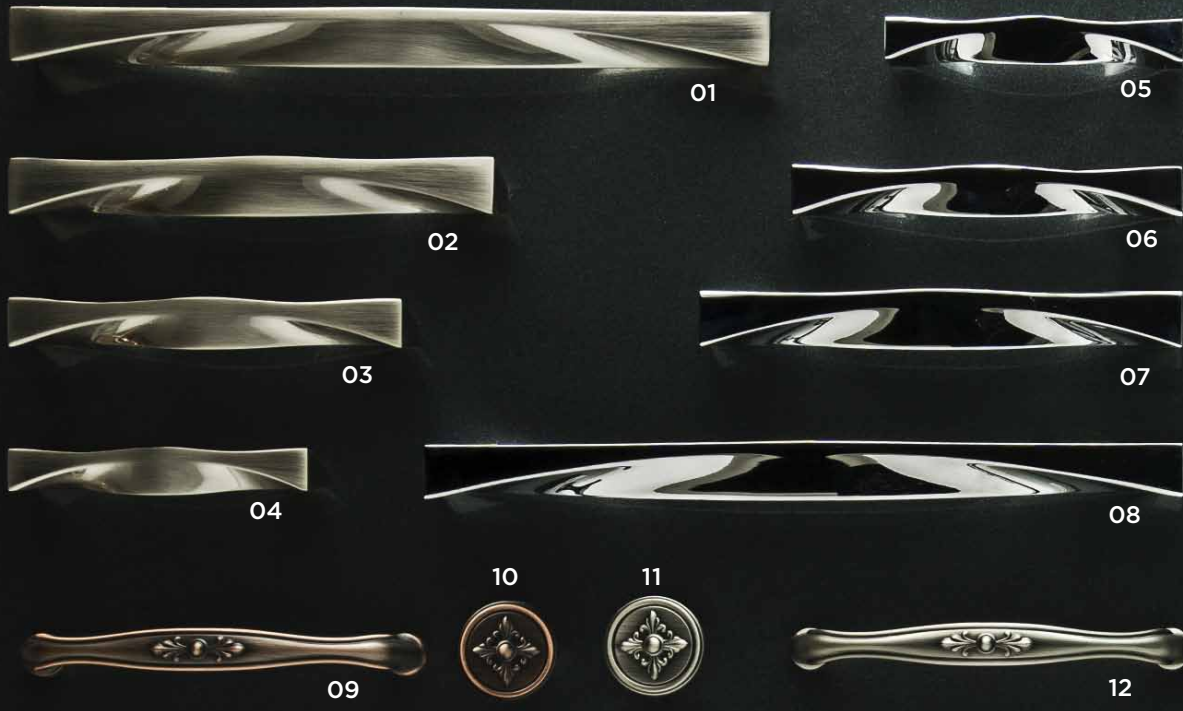

## W12

01 • 199-256BN \$16 <sup>00</sup>	02 • 199-160BN \$10 <sup>00</sup>	03 • 199-128BN \$8 <sup>00</sup>	04 • 199-096bN \$6 <sup>00</sup>
05 • 199-096PC \$6 <sup>00</sup>	06 • 199-28PC \$8 <sup>00</sup>	07 • 199-160PC \$10 <sup>00</sup>	08 • 199-256PC \$16 <sup>00</sup>
09 • 363-128EC \$5 <sup>00</sup>	10 • 362-000EC \$5 <sup>00</sup>	11 • 362-000AN \$5 <sup>00</sup>	12 • 362-128AN \$5 <sup>00</sup>

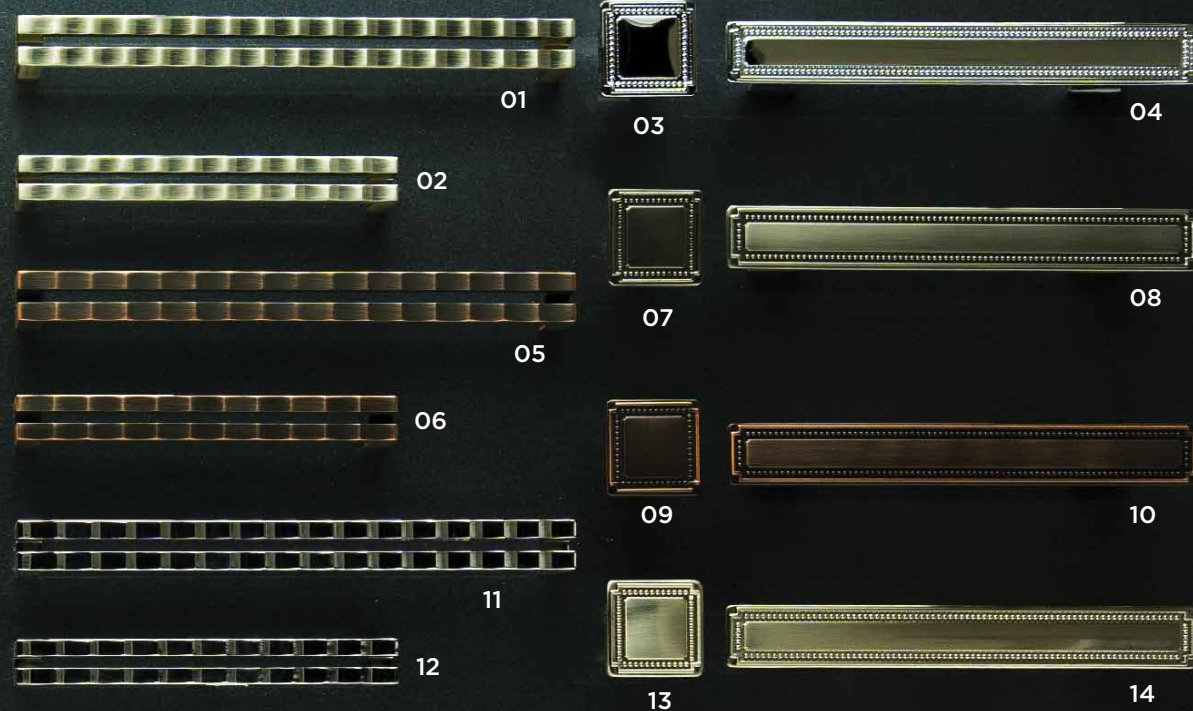

## W13

03 • 359-000PC \$5 <sup>00</sup>	04 • 359-128PC \$10 <sup>00</sup>	01 • 186-192BN \$9 <sup>00</sup>	02 • 186-128BN \$6 <sup>00</sup>
07 • 359-000AN \$5 <sup>00</sup>	08 • 359-128AN \$10 <sup>00</sup>	05 • 186-192EC \$9 <sup>00</sup>	06 • 186-128EC \$6 <sup>00</sup>
11 • 186-192PC \$9 <sup>00</sup>	12 • 186-128PC \$6 <sup>00</sup>	09 • 359-000EC \$5 <sup>00</sup>	10 • 359-128EC \$11 <sup>00</sup>
		13 • 359-000BN \$5 <sup>00</sup>	14 • 359-128BN \$11 <sup>00</sup>



01



02



03



04



05



06

## Have a question regarding our handle styles?

Come visit us at our showroom and talk to one of our friendly sales staff. All of our handle options are on display for you to see.

### K-Wood Kitchens Showroom

Weekdays 9 am to 6 pm | Saturdays 9 am to 5 pm  
36 Continental Place, Scarborough, ON, M1R 2T4  
(416) 332-0381

## W10

01 • 183-160PC  
\$8<sup>00</sup>

02 • 183-096PC  
\$6<sup>00</sup>

03 • 183-320PC  
\$15<sup>00</sup>

04 • 183-160BN  
\$8<sup>00</sup>

05 • 183-096BN  
\$6<sup>00</sup>

06 • 183-320BN  
\$15<sup>00</sup>



01

# C1

01 • H7491-25A

02 • H7561-25A

7 inch \$15<sup>50</sup>

H7562-25A

4 inch \$9<sup>50</sup>

03 • H7581-25A

7 inch \$15<sup>50</sup>

H7582-25A

4 inch \$11<sup>50</sup>

04 • H7191-25A

7 inch \$15<sup>50</sup>

H7192-25A

4 inch \$19<sup>50</sup>



02



03



04



01



05



09



13



02



06



10



14



03




07



11



15



04



08



12



16

# C1

01 • K8491-25A  
\$7<sup>00</sup>

05 • H9491-94A  
\$12<sup>00</sup>

09 • H7492-94A  
\$13<sup>00</sup>

13 • K8491-94A  
\$9<sup>00</sup>

02 • K8561-25A  
\$7<sup>50</sup>

06 • H7561-94A  
\$14<sup>00</sup>

10 • H7562-94A  
\$11<sup>00</sup>

14 • K8561-94A  
\$9<sup>00</sup>

03 • K8581-25A  
\$7<sup>00</sup>

07 • H7581-94A  
\$16<sup>00</sup>

11 • H7582-94A  
\$12<sup>50</sup>


15 • K8581-94A  
\$9<sup>00</sup>

04 • K8192-25A  
\$9<sup>00</sup>

08 • H7191-94A  
\$17<sup>00</sup>

12 • H7192-94A  
\$12<sup>00</sup>

16 • K8192-94A  
\$6<sup>00</sup>

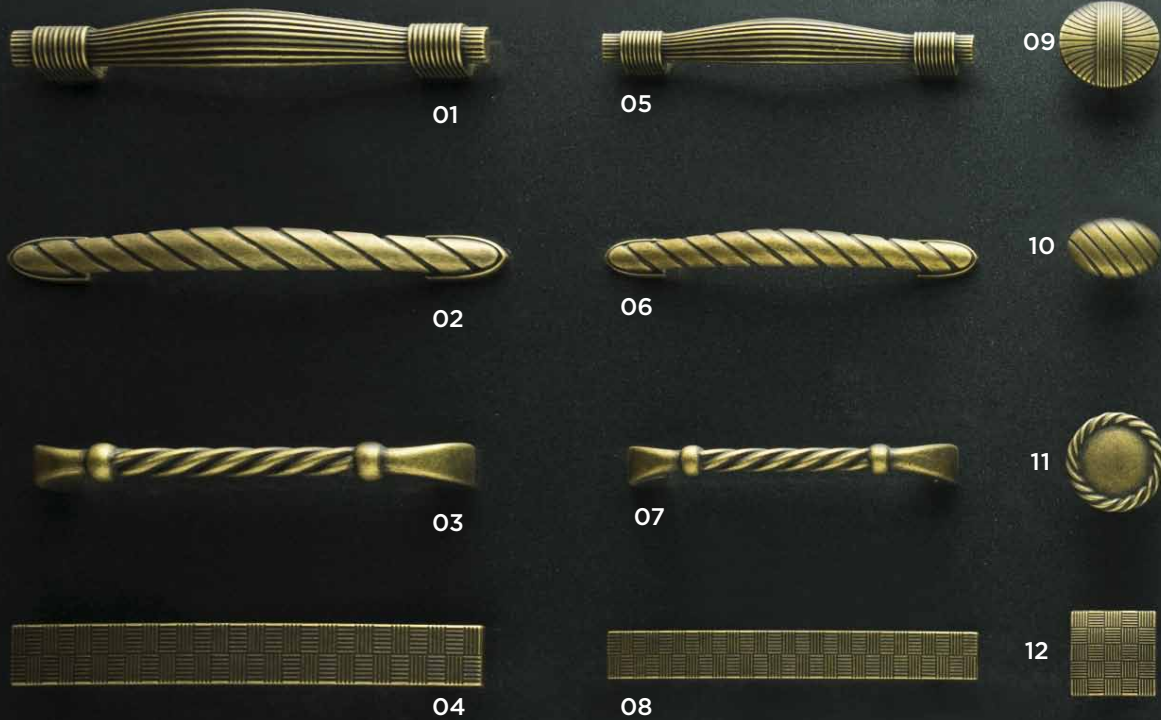

## C2

01 • H7491-33A  
\$18<sup>00</sup>

05 • H7492-33A  
\$14<sup>00</sup>

09 • K8491-33A  
\$9<sup>00</sup>

02 • H7561-33A  
\$14<sup>00</sup>

06 • H7562-33A  
\$11<sup>00</sup>

10 • K8561-33A  
\$9<sup>00</sup>

03 • H7581-33A  
\$16<sup>00</sup>

07 • H7582-33A  
\$12<sup>50</sup>

11 • K8581-33A  
\$9<sup>00</sup>

04 • H7191-33A  
\$17<sup>00</sup>

08 • H7192-33A  
\$12<sup>00</sup>

12 • K8192-33A  
\$8<sup>00</sup>

## C3

01 • H7491-50A  
7 inch \$13<sup>00</sup>

H7492-50A  
4 inch \$10<sup>00</sup>

02 • H7561-50A  
7 inch \$10<sup>00</sup>

H7562-50A  
4 inch \$8<sup>00</sup>

03 • H7581-50A  
7 inch \$13<sup>00</sup>

H7582-50A  
4 inch \$10<sup>00</sup>

04 • H7191-50A  
7 inch \$12<sup>00</sup>


H7192-50A  
4 inch \$8<sup>00</sup>

05 • K8491-50A  
\$7<sup>00</sup>

06 • K8561-50A  
\$7<sup>00</sup>

07 • K8581-50A  
\$7<sup>00</sup>

08 • K8192-50A  
\$8<sup>00</sup>

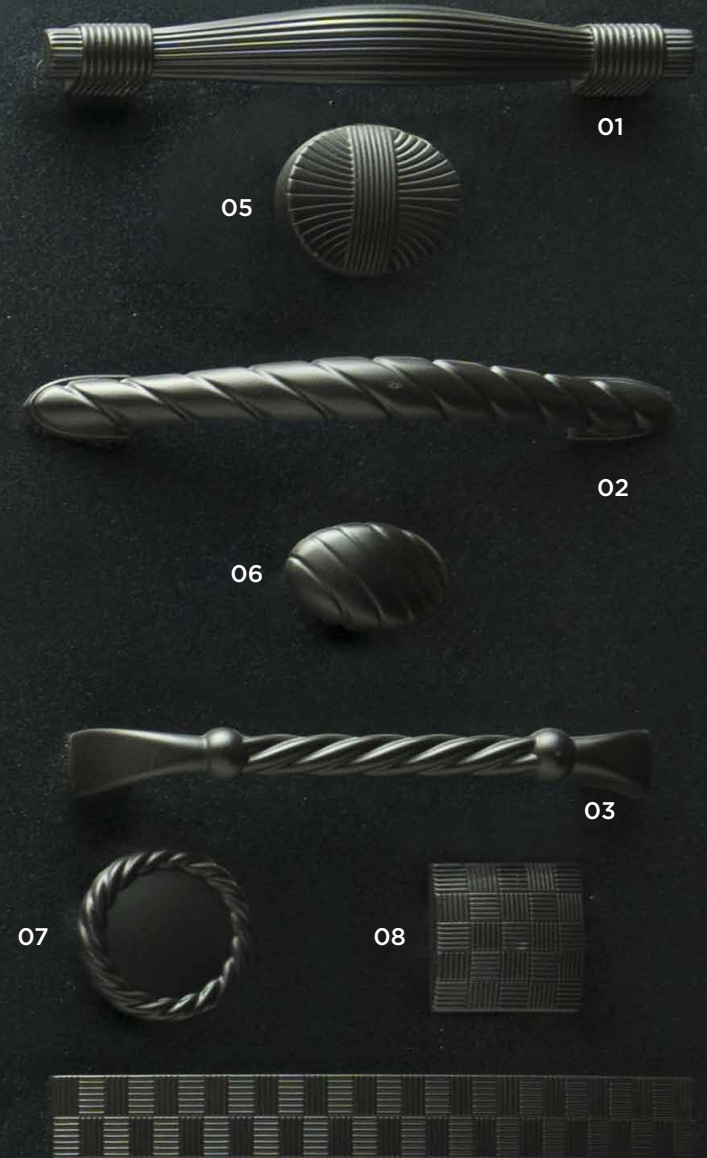




## C4

01 • K3103-25B \$3 <sup>00</sup>	04 • K3126-25B \$5 <sup>00</sup>	07 • H3429-25D \$3 <sup>00</sup>	10 • H1368-25B \$5 <sup>00</sup>
02 • K3107-25B \$2 <sup>00</sup>	05 • K3427-25D \$3 <sup>00</sup>	08 • H2228-25B \$3 <sup>00</sup>	11 • H3166-25B \$6 <sup>00</sup>
03 • H3405-25D \$3 <sup>00</sup>	06 • K3233-17C \$9 <sup>00</sup>	09 • H1108-25B \$3 <sup>00</sup>	



## C4

01 • K8852-25B \$8 <sup>00</sup>	03 • H3410-25B \$3 <sup>00</sup>	05 • HA029-25B \$6 <sup>00</sup>	07 • H3402-25B \$6 <sup>00</sup>
02 • K8672-25B \$	04 • H3411-25B \$7 <sup>00</sup>	06 • H7362-25B \$20 <sup>00</sup>	08 • H3407-25B \$5 <sup>00</sup>

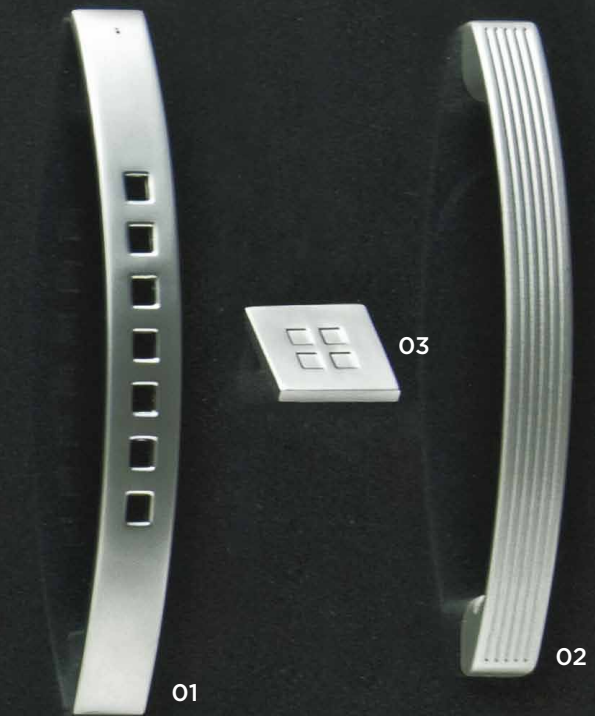

01

02



03



04



05



06



07

## C6

01 • H0638-17B  
\$6<sup>00</sup>

02 • H2500-22A  
\$4<sup>00</sup>

03 • HA042-17D  
\$3<sup>00</sup>

04 • KA252-25B  
\$4<sup>00</sup>

05 • KA191-25B  
\$6<sup>00</sup>

06 • K1900-25B  
\$3<sup>00</sup>

07 • H0725-25D  
\$6<sup>00</sup>




01



02



03



04



05



06

## C6

01 • HA182-25B6  
\$18<sup>00</sup>

03 • HA182-25B2  
\$9<sup>50</sup>

05 • HA182-17A2  
\$9<sup>50</sup>

02 • HA182-25B  
\$7<sup>00</sup>

04 • HA182-17A  
\$17<sup>00</sup>


06 • HA182-17A6  
\$18<sup>00</sup>





## C7

01 • K1657-95A \$3 <sup>00</sup>	05 • K2208-31B \$11 <sup>00</sup>	09 • K2287-31B \$15 <sup>00</sup>
02 • H1195-95C \$6 <sup>00</sup>	06 • K2259-31B \$24 <sup>00</sup>	10 • H3266-95A \$5 <sup>00</sup>
03 • H2406-95A \$5 <sup>00</sup>	07 • H3305-95A \$4 <sup>00</sup>	11 • K8751-94A \$13 <sup>00</sup>
04 • H3208-95A \$8 <sup>00</sup>	08 • K6081-84B \$10 <sup>00</sup>	12 •

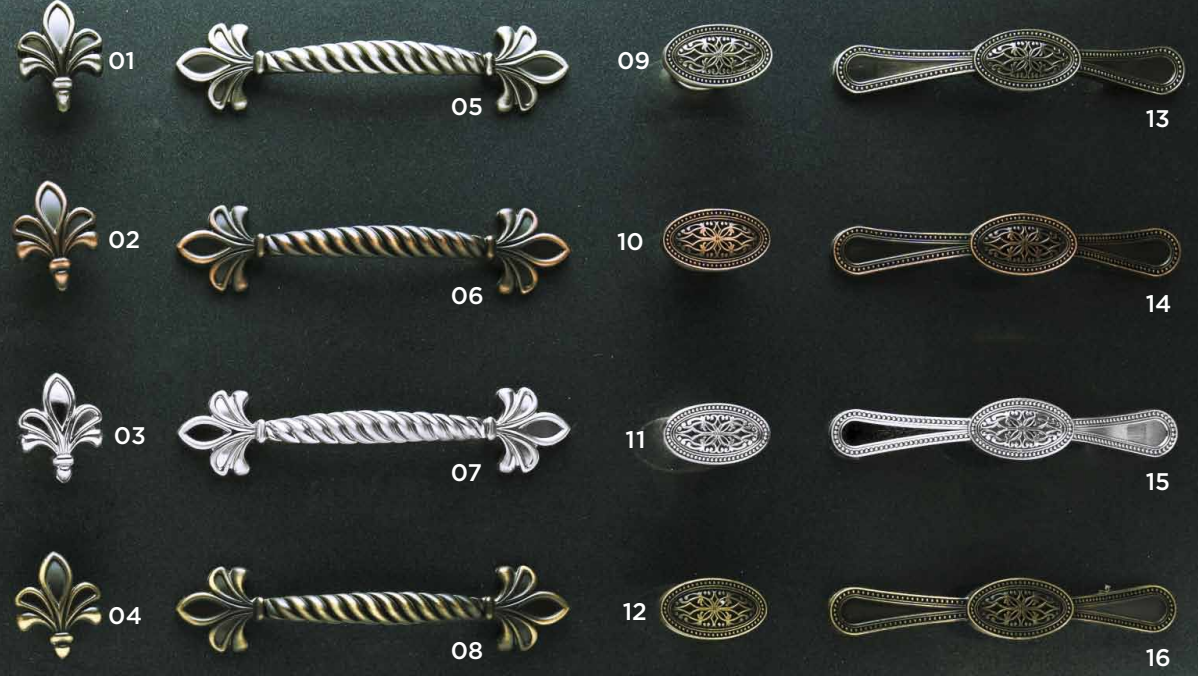

## C10

01 • 925BNBDL \$5 <sup>00</sup>	05 • 925-96BNBDL \$7 <sup>00</sup>	09 • 112BNBDL \$7 <sup>00</sup>	13 • 112-96BNBDL \$9 <sup>00</sup>
02 • 925DBAC \$5 <sup>00</sup>	06 • 925-96DBAC \$7 <sup>00</sup>	10 • 112DBAC \$7 <sup>00</sup>	14 • 112-96DBAC \$9 <sup>00</sup>
03 • 925SN \$5 <sup>00</sup>	07 • 925-96SN \$7 <sup>00</sup>	11 • 112-SN \$7 <sup>00</sup>	15 • 112-96SN \$9 <sup>00</sup>
04 • 925ABSB \$5 <sup>00</sup>	08 • 925-96ABSB \$7 <sup>00</sup>	12 • 112ABSB \$7 <sup>00</sup>	16 • 112-96ABSB \$9 <sup>00</sup>



01




07



02



08

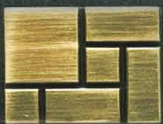

10




03




09



11

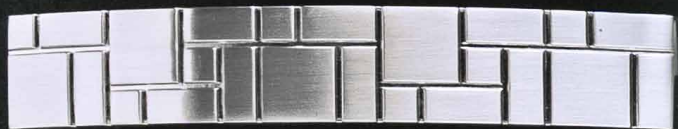

04

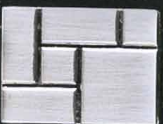


12



05



13

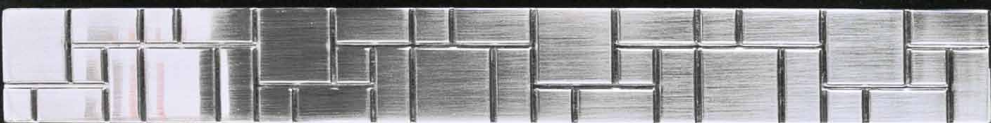

06

# C10

01 • 155-96DBAC  
\$7<sup>00</sup>

07 • 155DBAC  
\$5<sup>00</sup>

02 • 155-96BNBDL  
\$7<sup>00</sup>

08 • 155BNBDL  
\$5<sup>00</sup>

03 • 155-96SN  
\$7<sup>00</sup>

09 • 155-SN  
\$5<sup>00</sup>

04 • 874-96SN  
\$9<sup>00</sup>

10 • 874-ABSB  
\$4<sup>00</sup>

05 • 874-128SN  
\$12<sup>00</sup>

11 • 874-DBAC  
\$4<sup>00</sup>

06 • 874-160SN  
\$15<sup>00</sup>

12 • 874-SN  
\$4<sup>00</sup>

13 • 874BNBDL  
\$4<sup>00</sup>



## C11

01 • 1097ABSB \$4 <sup>00</sup>	05 • 1097SIM \$4 <sup>00</sup>	09 • 1099DBAC \$4 <sup>00</sup>	14 • 1098DBAC \$6 <sup>00</sup>
02 • 1097BNBDL \$4 <sup>00</sup>	06 • 1099ABSB \$4 <sup>00</sup>	10 • 1099SIM \$4 <sup>00</sup>	15 • 1098SIM \$6 <sup>00</sup>
03 • 1097SN \$4 <sup>00</sup>	07 • 1099BNBDL \$4 <sup>00</sup>	11 • 1098ABSB \$6 <sup>00</sup>	16 • 457N1 \$
04 • 1097DBAC \$4 <sup>00</sup>	08 • 1099SN \$4 <sup>00</sup>	12 • 1098BNBDL \$6 <sup>00</sup>	17 • 457L-N1 \$
		13 • 1098SN \$6 <sup>00</sup>	18 • 457-96N1 \$



## C11

01 • 1976DBAC \$5 <sup>00</sup>	05 • 1976BNBDL \$5 <sup>00</sup>	09 • 1977S-DACM \$5 <sup>00</sup>	13 • 1977SN \$6 <sup>00</sup>
02 • 1976DACM \$5 <sup>00</sup>	06 • 1977S-DBAC \$5 <sup>00</sup>	10 • 1977S-BNBDL \$5 <sup>00</sup>	14 • 1977-DACM \$6 <sup>00</sup>
03 • 1976SN \$5 <sup>00</sup>	07 • 1977S-ABSB \$5 <sup>00</sup>	11 • 1977-DBAC \$6 <sup>00</sup>	15 • 1977BNBDL \$6 <sup>00</sup>
04 • 1976ABSB \$5 <sup>00</sup>	08 • 1977S-SN \$5 <sup>00</sup>	12 • 1977-ABSB \$6 <sup>00</sup>	

## **K-Wood Kitchens Showroom**

Weekdays 9 am to 6 pm | Saturdays 9 am to 5 pm  
36 Continental Place, Scarborough, ON, M1R 2T4  
(416) 332-0381